

SCOTT® Coreless JRT® Loading Instructions

Installing the dispenser

TO INSTALL DISPENSER USING BRACKET AND MOUNTING SCREWS

- 1 Determine at what height the dispenser will be hung on wall. K-C recommends positioning the bracket 36" from the floor and 12" from the front edge of the toilet. Make sure bracket remains level.
- 2 Using a pencil or other marker, mark a dot on the wall where the screw holes are on the bracket.



- 3 Attach the bracket to the wall using the screws provided.



- 4 Line up the slots on the back of the dispenser with the tabs on the bracket. Push down firmly, making sure the dispenser is fully seated on the bracket.



- 5 While dispenser is hanging on wall bracket, mark bottom two anchor locations. Pre-drill the bottom holes using a #25 drill bit.




- 6 Reposition dispenser on wall bracket. Attach bottom of dispenser to the wall, installing remaining two screws at bottom left and right of dispenser back.

SEE OTHER SIDE FOR LOADING INSTRUCTIONS.



TO INSTALL DISPENSER USING METAL WALL PLATE

- 1 For best results, clean all surfaces with alcohol before installation.
- 2 Remove backing from one side of each pad to expose adhesive. Stick four adhesive pads on back (smooth side) of wall plate, spacing them evenly near corners of wall plate. Apply bead of commercial adhesive generously on back of plate (not included with plate.)

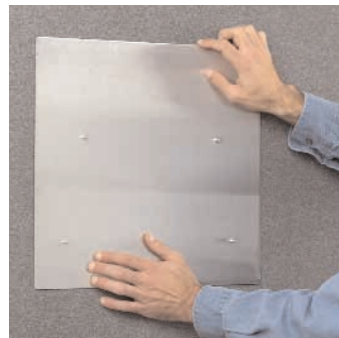

- 3 Remove second paper covering on each pad to expose adhesive. Reverse wall plate and position it on wall. Make sure the four bolts are protruding and the two closer together are at the top. Press firmly to adhere plate to wall.



- 4 Line up the holes in the mounting bracket with the top pair of bolts. Place a nut on each screw and tighten (turning clockwise) to secure bracket on wall plate.



- 5 Find two horizontal slots on the back of the dispenser unit. Align these slots carefully with the two horizontal tabs on the bracket. Push firmly to lock the dispenser securely onto the bracket.



- 6 Remaining pair of bolts should show through the holes at the bottom of the dispenser just inside the mouth. Place a nut on each of these bolts and turn clockwise to tighten.
- 7 Wait 24 hours before loading dispenser; this allows adhesive to cure thoroughly for better adhesion.

**LOADING IS EASY —
FRONT COVER DOES NOT OPEN!**

Inserting roll into dispenser



- 1 Install new roll by aligning “dimple” in center of tissue roll with left arrow located on the lower left of the dispenser front. With tissue unrolling in clockwise direction, push roll upwards firmly until it snaps into place.



- 2 When roll is installed properly, approximately 1" of tissue is exposed and roll rotates freely.

Removing main roll



- 3 When the tissue roll is no longer visible through the viewing window, the roll may be transferred to the stub roll holder. To remove main roll, slip hand upward between back side of the roll and the front side of the metal spring. Depress the metal spring slightly and dislodge the roll. Pull down easily to remove.

Inserting stub roll



- 4 Flip leftover roll so that tail unrolls in a counter-clockwise direction. Push the used roll up into the small space to the right and secure in the roll holders.



- 5 Refer to Step 1 to install new roll.
- 6 Tear off or rewind leading edge of new tissue so that the end is not showing.

SEE OTHER SIDE FOR MOUNTING INSTRUCTIONS.

 **Kimberly-Clark®
Professional**

© Registered Trademark of Kimberly-Clark Worldwide, Inc.
© 2004 KCWW 17003 KCPM-6724