


Module Installation Instructions


REMOVING EXISTING MODULES

1. Remove retaining screws if present.
2. Press latches in, then slide module up and out of the housing (Figure 1).

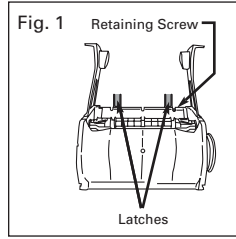


MODULE INSTALLATION IN PLASTIC HOUSING


Electronic module shown. Installation steps are the same for all modules.

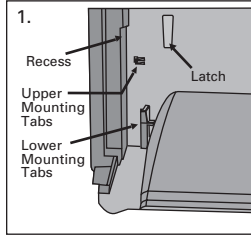


1. Identify attachment components in housing.

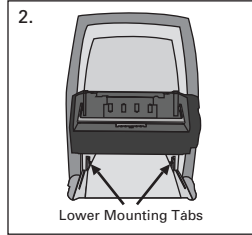

2. Position top of module side walls at top of recess. Module should be above lower mounting tabs and fully seated and flat against back of housing.

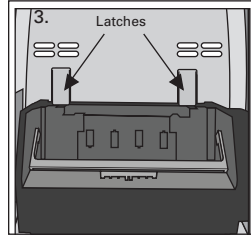

3. Push module straight down ensuring both latches engage fully.

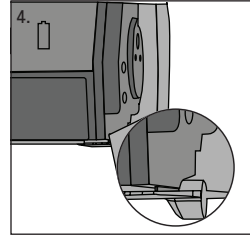


4. Bottom of module side walls should be parallel to and flush with bottom of housing.


NOTE: Ensure that module is properly installed by grasping the lower front portion of module and pulling forward. If module moves forward it is not properly installed and should be removed and reinstalled. Close cover and ensure that module circular side member (raised side cover in eHRT or knob in mechanical and NG modules) is centered in the opening in side of cover.

MODULE INSTALLATION IN STAINLESS STEEL HOUSING


Electronic module shown. Installation steps are the same for all modules.

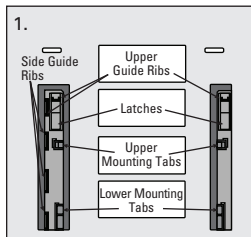

1. Identify attachment components in housing.

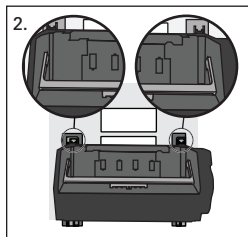

2. Locate upper rear surface of module side wall against upper guide ribs in housing. Left rear side wall of module should be in contact with side guide ribs and module fully seated and flat against back of housing brackets.

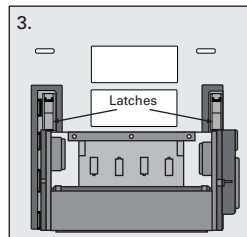


3. Push module straight down ensuring both latches engage fully.

NOTE: Ensure that module is properly installed by grasping the lower front portion of module and pulling forward. If module moves forward it is not properly installed and should be removed and reinstalled. Close cover and ensure that module circular side member (raised side cover in eHRT or knob in mechanical and NG modules) is centered in the opening in side of cover.

ROLL HOLDER INSTALLATION

1. Snap roll holders marked "L" and "R" into side walls of module.

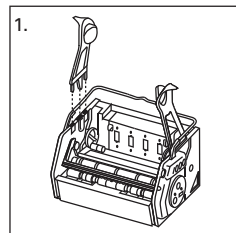

Americans with Disabilities Act (For use in U.S. only): Title III of the Americans with Disabilities Act ("ADA") governs, in detail, the placement and operation of dispensers. You should ensure that your mounting and use of dispensers complies with that law as well as the regulations issued under that statute. The mounting suggestions in this document may or may not fulfill the obligations of the ADA with respect to your facility.

KIMBERLY-CLARK CORPORATION DISCLAIMS LIABILITY FOR PERSONAL INJURIES OR PROPERTY DAMAGES RESULTING FROM INSTALLATION NOT PERFORMED BY KIMBERLY-CLARK.